


Changing the colour wheel for a twinkle wheel on a Starscape 50/75/100 watt light source

Turn off the power and unplug the light source from the mains supply.



Slacken the four screws located at the bottom of the side walls of the unit and remove the two screws on the top. Lift off the lid taking care not to put too much strain on the earth strap attached to the lid and the main metal body.

Slacken the boss retaining screw and remove the colour wheel and boss.

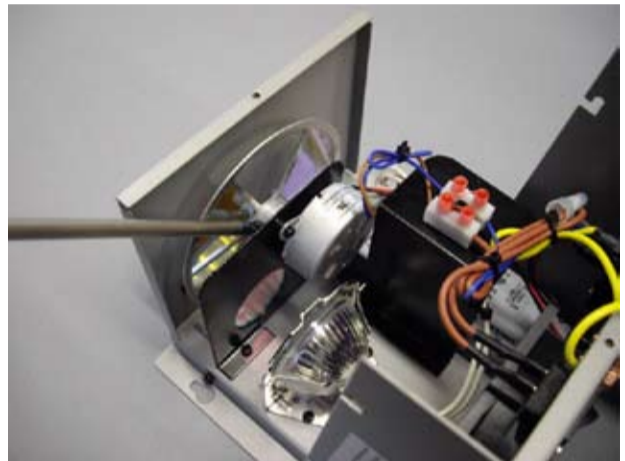

Remove the two wheel retaining screws



Fit the twinkle wheel to the boss

Refit the boss/twinkle wheel to the motor spindle and refit the lid.

