



R150 Metal Halide Light Source
Changing the colour wheel

Switch off the power and unplug from the mains.
Remove the retaining screw and withdraw the lid.


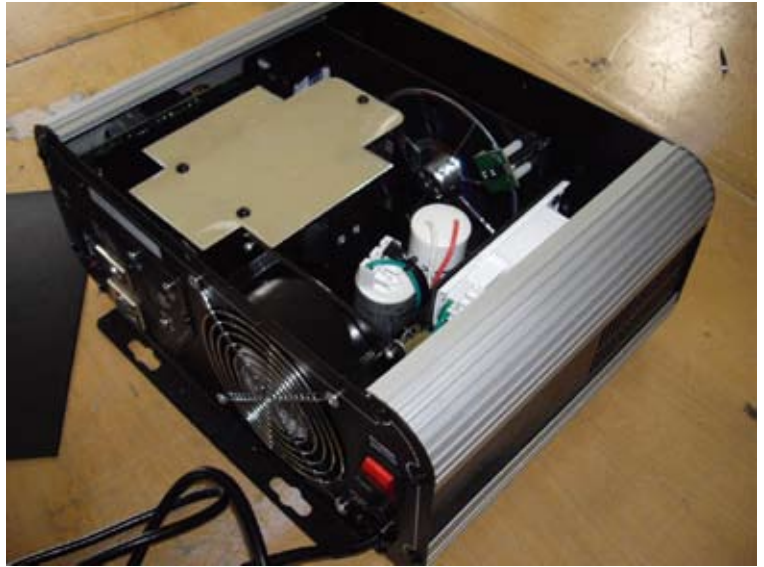


Identify the colour wheel sensor assembly (green) and remove the two small retaining screws. Withdraw the sensor making sure to retain the metal L-shaped shield shown below.

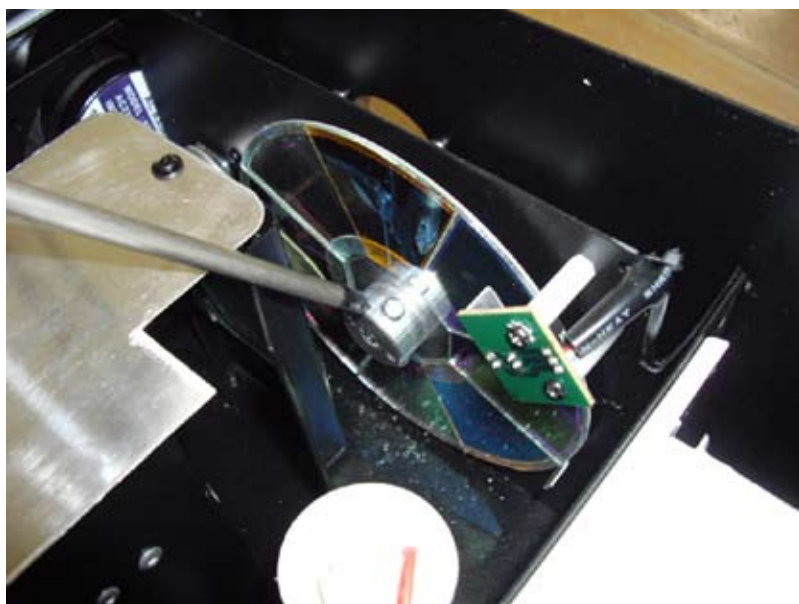

Slacken the colour wheel boss retaining screws and remove the colour wheel.

Place the twinkle wheel onto the motor shaft and re-assemble the sensor and shield.

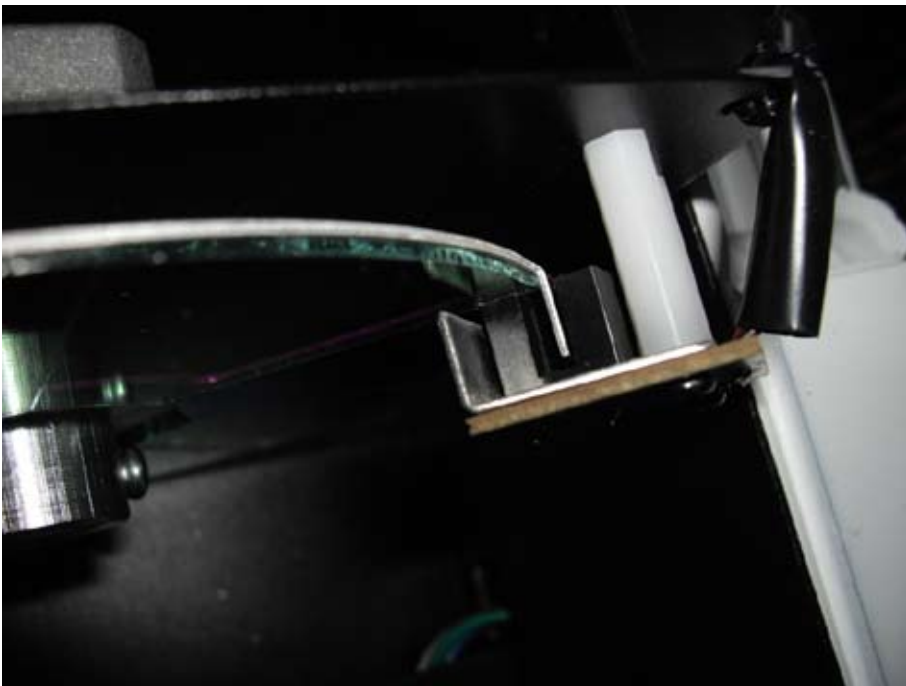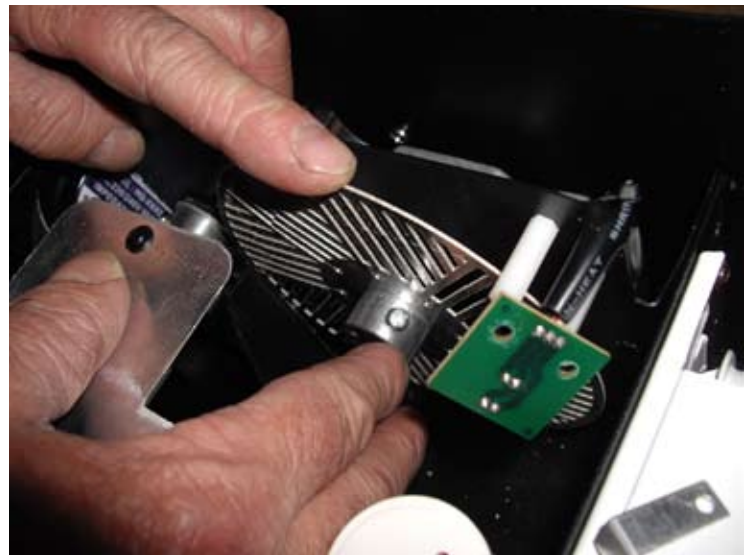

Adjust the wheel position on the shaft so the tab on the wheel runs freely through the sensor gate.

Check that all screws are tight and then replace the lid and screw shut.